

## INSTALLATION HINTS

## **THERMO-PLAS CANOPY**



NOTE: These helpful installation hints can be used in conjunction with the vehicle specific instructions supplied with your Ironman 4x4 Thermo-Plas Canopy

1. Stand the canopy on its end to allow access to the rubber seals.

2. Apply silicone sealant to joints between side and front rubber seals.



3. Inject silicone sealant into the hollow ends of rubber seals.



4 Apply a bead of silicone sealant between the ends of the canopy seals and the door seal.



5. Place canopy in position on tub of vehicle.




6. Before attaching the canopy to the tub, check that the rear door seal is just touching the tailgate of the vehicle.

NOTE: If rear door seal is pushing too firmly against the tailgate it will prevent the rear door from latching properly.



7. Check that canopy is sitting squarely on tub.

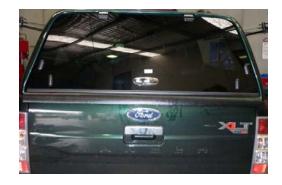

8. Secure canopy to tub using appropriate fixing brackets.

NOTE: Large brackets shown are designed to be used with the Ironman Superlock Kits supplied with the Ironman Tub Liner.

Small brackets shown are designed to be used without a tub liner or with an under-lip tub liner.





9. Once canopy is secured, recheck alignment of canopy and rear door.



## If rear door or catches require adjustment do so as follows:

 Before adjusting anything lubricate strikers with dry lube. This is very important because door will no latch properly without lubrication. Catches will require re-lubrication at regular intervals as described on the sticker on the lower edge of the rear door frame.



 Strikers have slotted mounting points and can be adjusted backwards and forwards by loosening the nuts, adjusting and re-tightening the nuts.



 Catches also have slots and can be adjusted in and out by removing the plastic cover and loosening the retaining nuts.



Continued over page...




Once catches are adjusted, the length of the linkages between the handle and the catches might also need to be adjusted to allow the catch tongue to extend far enough to latch properly and also retract far enough to allow the door to open easily.

To do this remove the interior handle from the canopy door, remove the plastic handle surround and unclip the linkages from the handle.

To extend the linkages, rotate in an anti-clockwise direction. To shorten, rotate in a clockwise direction.





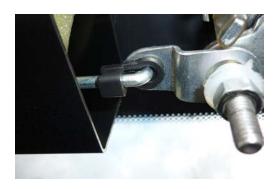

 The read door is also able to be adjusted at the hinges, both sideways and up and down.



